


2000 FORD EXPEDITION
WITH ELECTRONIC SPEEDOMETER

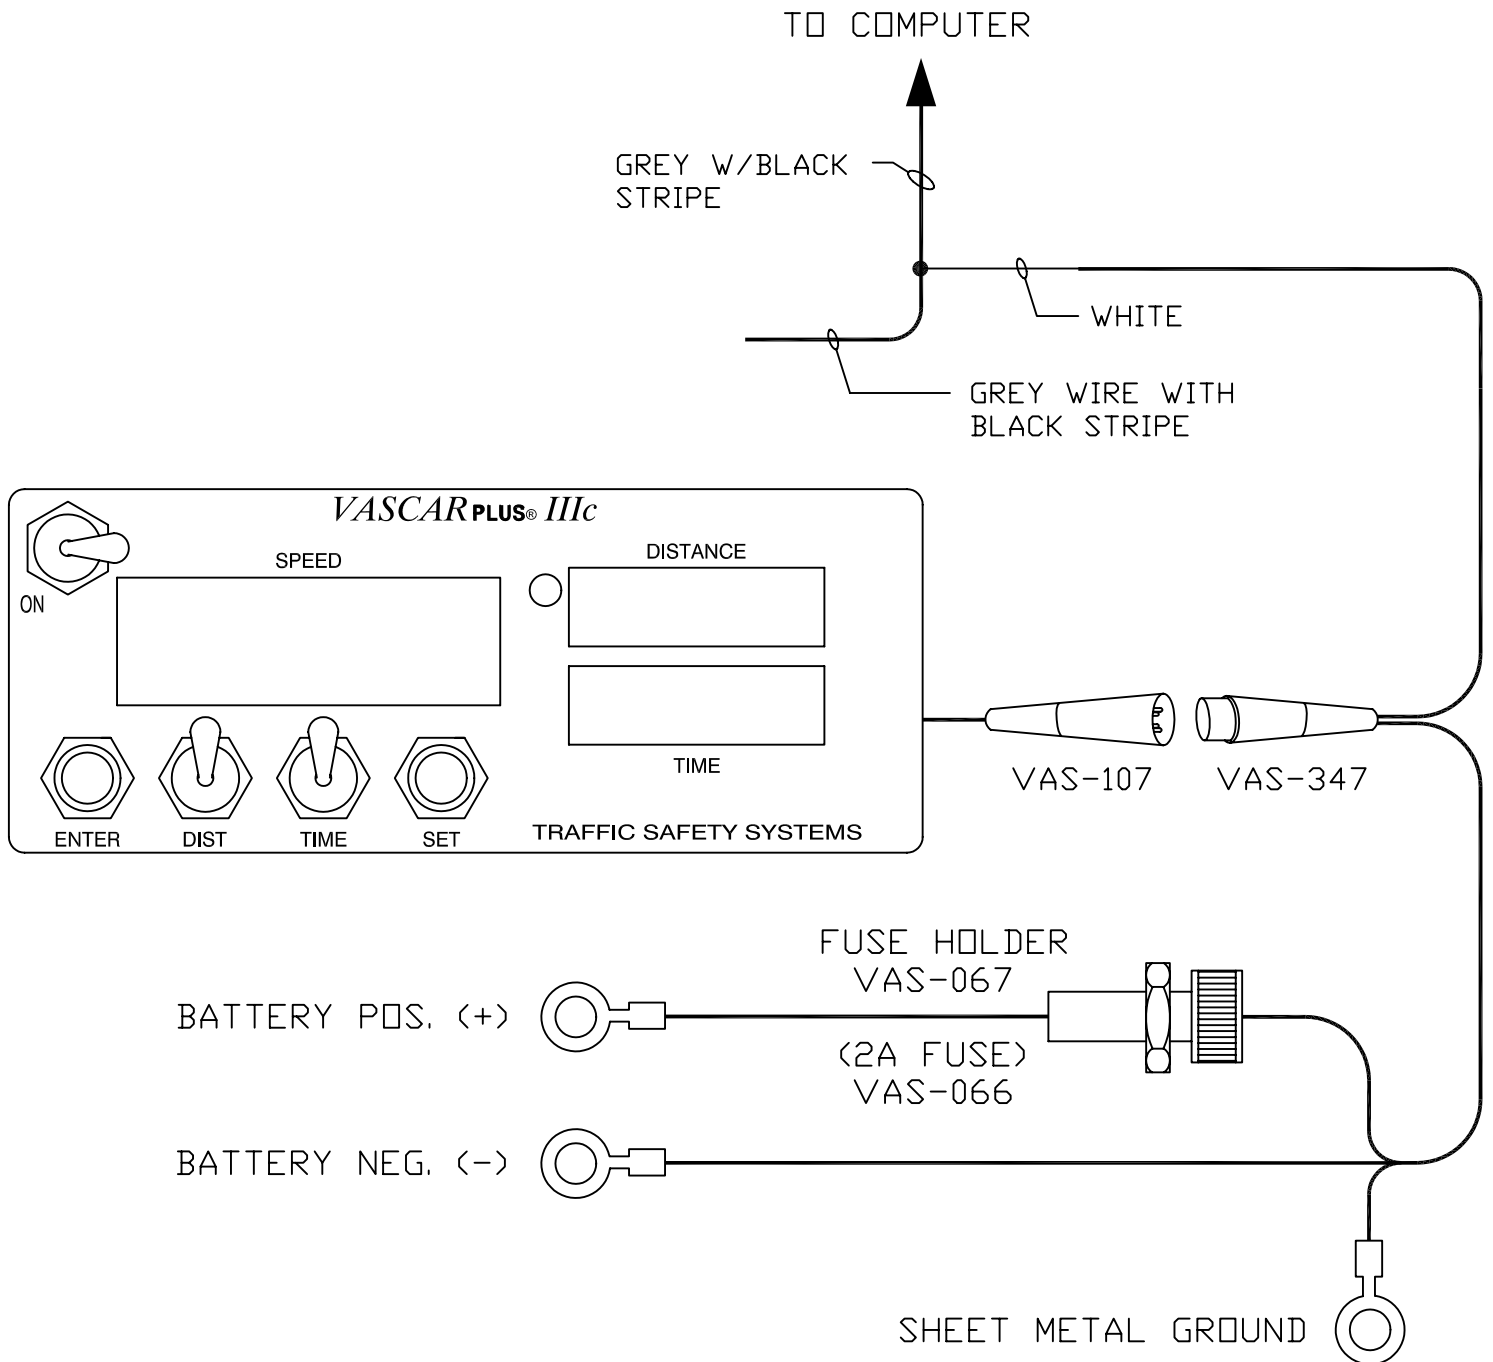

INSTRUCTIONS

LOCATE LOWER LOOM IN ENGINE COMPARTMENT IN FRONT CORNER OF PASSENGER FIREWALL. THERE ARE THREE BUNDLES AND IN THE LOWERMOST LOOM LOCATE THE GREY WIRE WITH BLACK STRIPE.